

Ersatzteilinformation
Spare part information



























940581

5830000169046_ABZ_INT_E
09.05.14
1/14

ME342J-N, ME342JE, ME342JO, ME380VR, ME381WC, ME386VR, ME388WR, ME386WR, ME387WC, ME342KO, ME343BA, ME343AA (55000000056182, 55000000056186)

Attention, important note!
Code must absolutely be adjusted to the unit to be repaired. Since otherwise consequential damage may occur.



Function	Operation	Indication	Note
Activate variant coding mode	  2 sec.		The customer service code is at the appliance -> at a label placed at the inner surface of the door (beginning with program selector Pos.2 to Pos.10 left to right) -> at the product label at the rear panel of the appliance
			- Close the door and wait 2 s.
	 		- Set program selector switch to position 0 ("OFF")
			- Set program selector switch to position 12 while the Start/Pause button is pressed until display is active - Release the Start/Pause button.
Select variant			- Select the variant with the program select switch (not via "OFF") Program selector position 1 corresponds to Pos.1, etc.
			Pos. 2 ⇒ Key variant
			Pos. 3 ⇒ Spin speed
			Pos. 4 ⇒ Warm water
			Pos. 5 ⇒ Aqua stop / Aqua shield
			Pos. 6 ⇒ Valves terminal
			Pos. 7 ⇒ Volt Control
			Pos. 8 ⇒ Reload
			Pos. 9 ⇒ Load recommendation
			Pos. 10 ⇒ Child lock



Ersatzteilinformation
Spare part information

940581

58300000169046_ABZ_INT_E
09.05.14
2/14

ME342JN, ME342JE, ME342JO, ME380VR, ME381WC, ME386VR, ME388WR, ME387WC, ME342KO, ME343BA, ME343AA (55000000056182, 55000000056186)

Key variant button position for 2 control

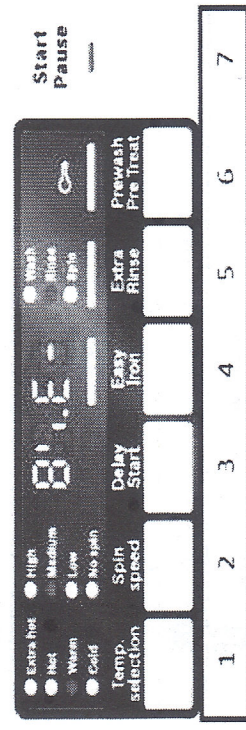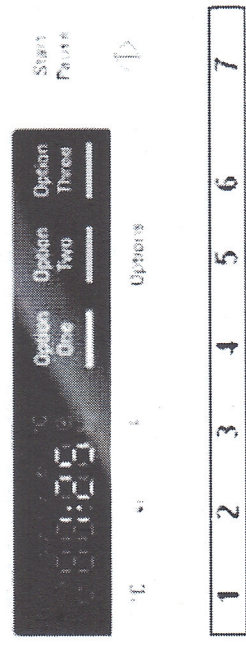


Function	Operation	Indication	Note
Setting Key variant for 2 control			
Pos. 2 (range 0...7)	U		- Set program selector switch to position 2 (not via "OFF") - The current variant code is incremented, when the "Reduce spin speed" button is pressed.
Variant code 0:	↑	0	1 Temperature
Variant code 1:	↑	1	2 Spin Speed
Variant code 2:	↑	2	3 Ready in
Variant code 3:	↑	3	4 Quick/Speed perfect
Variant code 4:	↑	4	5 Water & Rinse plus
Variant code 5:	↑	5	6 Water & Rinse plus
Variant code 6:	↑	6	7 Intensive/Eco perfect
Variant code 7:	↑	7	8 Intensive/Eco perfect

940581

Ersatzteilinformation Spare part information

ME342J-N, ME342JE, ME342JO, ME380VR, ME381WC, ME386VR, ME388WR, ME387WC, ME342KO, ME343BA, ME343AA (550000000056182, 550000000056186)

Key variant button position for 1 control

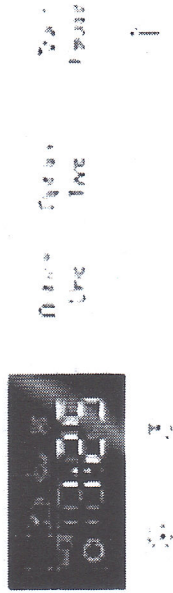

1 3 4 5 7


















Function	Operation	Indication	Note
Pos. 2 Setting Key variant for 1 control (range 0...7)			- Set program selector switch to position 2 (not via "OFF") - The current variant code is incremented, when the "Reduce spin speed" button is pressed.
Variant code 0:			1 Spin Speed
Variant code 1:			3 Ready in
Variant code 2:			4 Quick/Speed perfect
Variant code 3:			5 Prewash/Soak
Variant code 4:			7 Start
Variant code 5:			3 Spin Speed
Variant code 6:			3 Spin Speed
Variant code 7:			3 Spin Speed

Ersatzteilinformation
Spare part information

940581

5830000169046_ABZ_INT_E
09.05.14
4/14

 ME342J-N, ME342JE, ME342JO, ME380VR, ME381WC, ME386VR, ME380WR, ME386WR, ME388WR, ME387WC, ME343BA, ME343AA (55000000056182, 55000000056186)

Function	Operation	Indication	Note
Setting variants			
			- Set program selector switch to variant position (not via "OFF") - The current variant code is incremented, when the "Reduce spin speed" button is pressed.
Variant code 0:			Speed variant Pos. 3 (range 0...7) 1400 rpm
Variant code 1:			Aqua stop variant Pos. 5 (range 0...1) Without Aqua Stop (cold water) With Aqua-Stop (cold water)
Variant code 2:			Warm water variant Pos. 4 (range 0...1) Cold water warm water (Aqua Stop not possible)
Variant code 3:			Valve terminal Pos. 6 (range 0...1) Normal operating mode (always 0) Mainwash/prewash interchanged
Variant code 4:			Volt Control * Pos. 7 (range 0...1) Disabled Enabled
Variant code 5:			Load recommendation ** Pos. 9 (range 0...1) No load With load
Variant code 6:			Reload Pos. 8 (range 0...1) Not open Open during pause
Variant code 7:			Child lock Pos. 10 (range 0...1) OFF ON
Set new variant (Update variant code in the control unit) All changes become valid after the Start/Pause button is pressed and leave Variant coding mode			
Leave variant coding mode Set program selector switch to Position 0 ("OFF")			

* See user manual, if volt Check available for the model (by two blinking dots on display), select "enable".

** if model has load recommendation available (by "kg" symbol on display), select "with load".